

2" Hydraulic Cylinder Extension Installation Procedure

1. Select the correct extension size for your application.
2. Remove the retaining pin from the cylinder that secures the oversleeve and piston pad to the piston rod.
3. Remove the piston pad and set it aside for later use.
4. Remove the oversleeve. (You will not need it while you are using the extension).
5. Remove the two retaining pins from the extension. **(DO NOT REMOVE THE BOLT)**
6. Slide the extension onto the cylinder, as shown in the illustration.
7. Replace the retaining pin through the extension, making sure that it also goes through the piston rod. Replace the piston pad and the retaining pin. The cylinder is now ready for use.

